



Removal

- 1 Unscrew door catch button.
- 2 Remove window regulator (72—110).
- 3 Remove door lock frame.
- 4 Remove arm rest with grip (72—140).

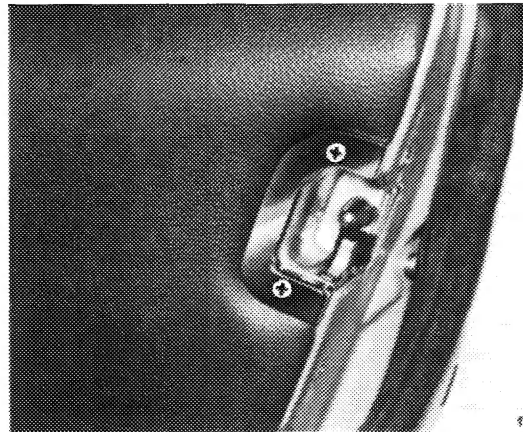


172-12318

- 5 Press bottom retaining cam on ashtray housing out of door liner.

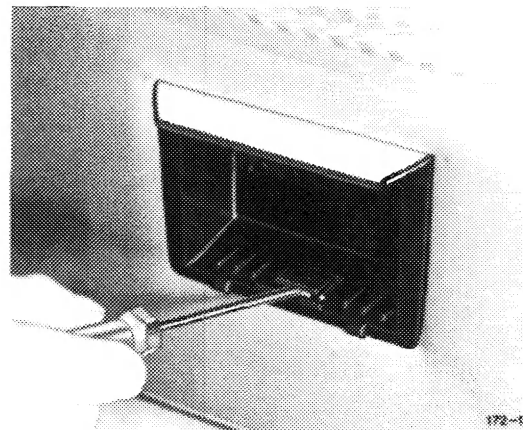


172-12319

- 6 Lift ashtray out of door liner.

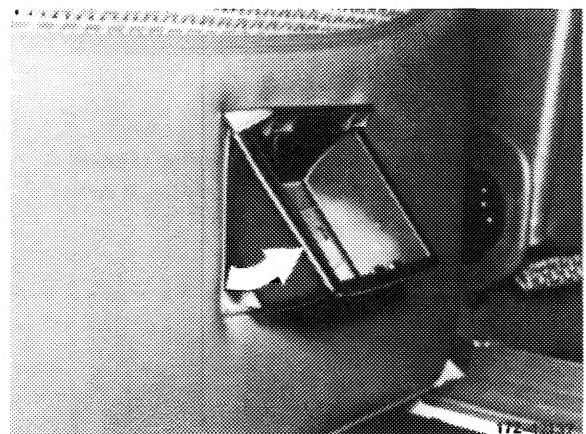


172-12320


7 Unclip side and bottom of door liner at inside door panel. Insert plastic wedge as close to clips as possible.

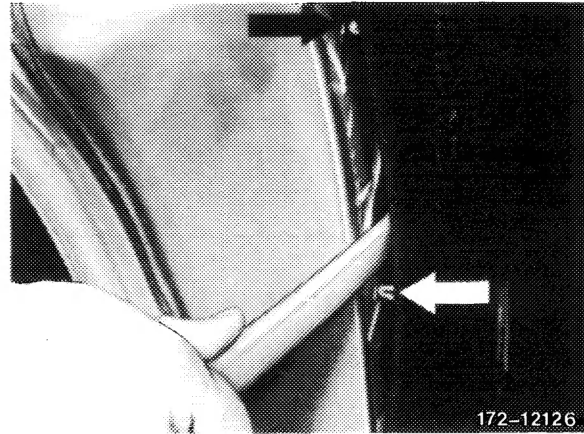

8 Insert hand between door liner and inside door panel, and press out the clip (arrow) in area of ashtray.

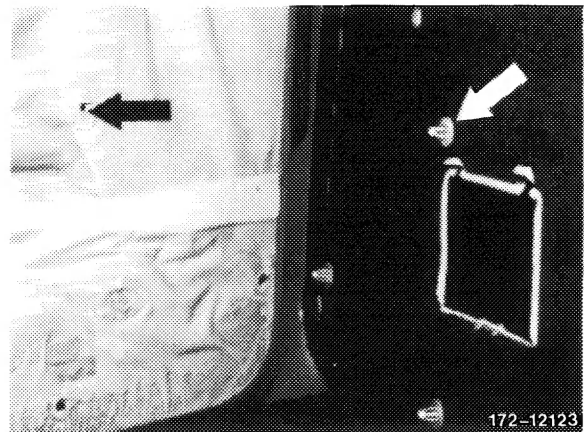

9 Press door liner off of top clips with a plastic wedge.

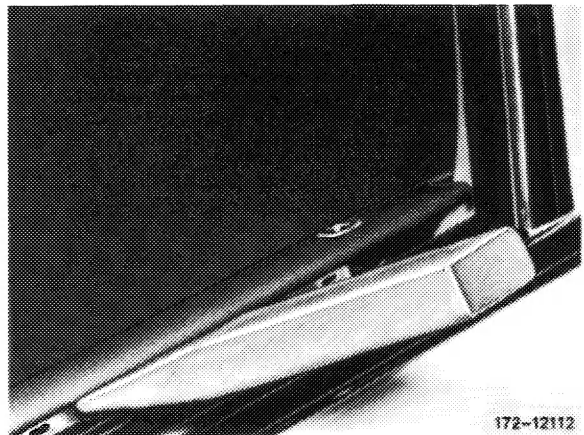

Installation

10 Install in reverse sequence.

Note: If plastic sheet is damaged during removal, replace it and install new sheet carefully. It serves as a seal against water and dust.